



Minimum quantity in a package


●Minimum Packaging Quantity

Please order by units of minimum packaging quantity.

The quantity in a package basically depends on the **core size** and **coil shapes**.

Note that the outside dimensions vary depending on the diameter of the winding and/or the number of turns, therefore, the number of products in a package may differ.

How to read a Coil Part No.

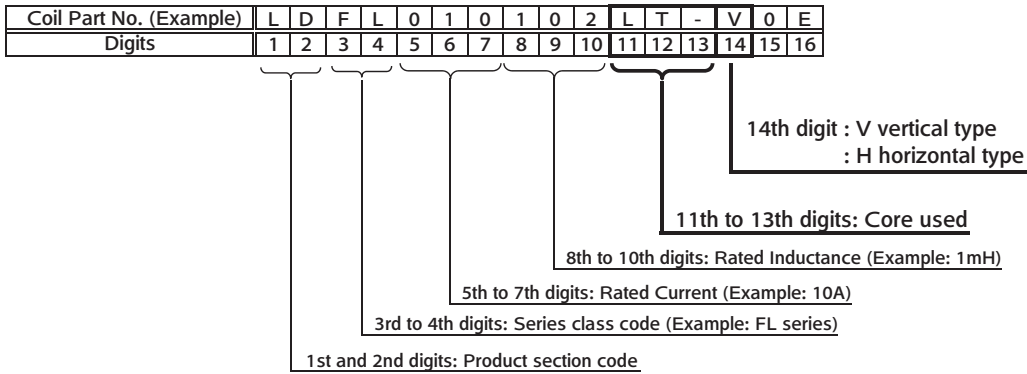

◆Reference quantity in a package (pcs/pack)

Digits in Coil Part No.				
3rd to 4th digits	11th to 13th digits	14th digit		
Series	Core used	Coil shape		
		V: vertical type	H: horizontal type	
FL	LS-	200	400	
	L5-	231	192	
	L6-	231	192	
	LT-	100	75	
	LR-	80	75	
	LJ-	48	50	
	LBU	---	50	
	LJU	48	50	
	LNQ	---	32	
	LGQ	---	32	
SM	P1F	270	---	
	P2D	280	---	
	P7D	200	---	
	P5D	280	---	
	P1B	270	---	
CM	G3-	200	192	
	G4-	200	256	
	G6-	231	192	
	G7-	231	75	
	G8-	132	75	
	G9-	100	75	
	G0-	100	75	
	GJ-	80	75	
	GQ-	64	32	
	GK-	48	32	
	JRH	100	75	
	AM	J7H	231	75
		J8H	132	75
JAH		80	50	
JBH		60	50	
JCH		48	32	
JKH		48	32	

Digits in Coil Part No.			
3rd to 4th digits	11th to 13th digits	14th digit	
Series	Core used	Coil shape	
		V: vertical type	H: horizontal type
AW	WKH	24	32
	WLH	18	18
TM	NS-	200	400
	N1-	200	256
	N2-	200	256
	NU-	200	---
	NP-	231	192
	N5-	231	256
	N6-	231	192
	N7-	100	75
	N9-	100	75
BM	X6-	231	192
	X7-	231	75
	X8-	132	75
	XR-	100	75
	DM	AQD	200
ARD		200	---
AUG		231	---
AUD		231	---
AZD		64	---
CQF		200	---
CTB		132	---
CYF		50	---
CYB		50	---
DUF		132	---
DVF		100	---
DYB		32	---
DZB		18	---