Minimum quantity in a package


Minimum Packaging Quantity

Please order by units of minimum packaging quantity.

The quantity in a package basically depends on the core size and coil shapes.

Note that the outside dimensions vary depending on the diameter of the winding and/or the number of turns, therefore, the number of products in a package may differ.

How to read a Coil Part No.

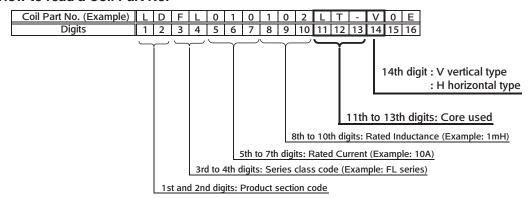

◆Reference quantity in a package (pcs/pack)

Digits in Coil Part No.					
3rd to 4th	11th to 13th	14th digit			
digits	digits				
Series	Core used	Coil shape			
		V: vertical type	H: horizontal type		
FL	LS-	200	400		
	L5-	231	192		
	L6-	231	192		
	LT-	100	75		
	LR-	80	75		
	LJ-	48	50		
	LBU		50		
	LJU	48	50		
	LNQ		32		
	LGQ		32		
SM	P1F	270			
	P2D	280			
	P7D	200			
	P5D	280			
	P1B	270			
СМ	G3-	200	192		
	G4-	200	256		
	G6-	231	192		
	G7-	231	75		
	G8-	132	75		
	G9-	100	75		
	G0-	100	75		
	GJ-	80	75		
	GQ-	64	32		
	GK-	48	32		
	JRH	100	75		
АМ	J7H	231	75		
	J8H	132	75		
	JAH	80	50		
	JBH	60	50		
	JCH	48	32		
	JKH	48	32		

Digits in Coil Part No.				
3rd to 4th	11th to 13th	14th digit		
digits	digits			
Series	Core used	Coil shape		
		V: vertical type	H: horizontal type	
AW	WKH	24	32	
	WLH	18	18	
ТМ	NS-	200	400	
	N1-	200	256	
	N2-	200	256	
	NU-	200		
	NP-	231	192	
	N5-	231	256	
	N6-	231	192	
	N7-	100	75	
	N9-	100	75	
ВМ	X6-	231	192	
	X7-	231	75	
	X8-	132	75	
	XR-	100	75	
DM	AQD	200		
	ARD	200		
	AUG	231		
	AUD	231		
	AZD	64		
	CQF	200		
	СТВ	132		
	CYF	50		
	CYB	50		
	DUF	132		
	DVF	100		
	DYB	32		
	DZB	18		